

Lista de compatibilidad del control remoto

3: INQ Chat 3G, INQ Mini 3G, INQ1, MF112, Skypephone, Skypephone S2, Skypephone S2x, ZTE F102, ZTE F107

Acer: beTouch E100, Acer Liquid Z3, Allegro, beTouch E110, beTouch E120, beTouch E130, beTouch E200, beTouch E400, DX900, F1, F900, Iconia, Iconia A1-830, Iconia B1-720, Iconia Smart, Liquid, Liquid e, Liquid E1, Liquid E2, Liquid E3, Liquid Jade, Liquid Metal, Liquid S1, Liquid S2, Liquid X1, Liquid Z200, Liquid Z4, Liquid Z5, M900, neoTouch, neoTouch P300, neoTouch P400, Stream, X960

Alcatel: OT 331, OT 332, OT-535, OT-756, OT E256, Touch Idol X 6040D, One Touch Evo 7, One Touch T10, OneTouch Idol, OneTouch Idol X+ 6043D, OneTouch Pop C3, OneTouch Pop C7, OneTouch SPop, OT 209, OT 222, OT 223, OT 255, OT 303, OT 355, OT 363, OT 565, OT 660, OT 665, OT 708, OT 710, OT-735, OT 799, OT 808, OT 990, OT 991, OT Crystal, OT-E221, OT-E227, OT E805, OT S211, OT-S319, OT-S520, OT V770, OT-203, OT-292, OT 507, OT-C701, OT C717, OT E201, OT E205, OT E259, OT S210, OT-E105, POP S3, POP S7, POP S9, Tribe OT 800, OT-V212

Allview: V1 Viper S

Amazon: Fire Phone

Amoi: MOS-1

Apple: iPad, iPad 1, iPad 2, iPad 3, iPad 4, iPad Air, iPad Mini, iPad Mini 2, iPhone, iPhone 2007, iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPod Nano 4G, iPod Nano 5G, iPod Nano 6G, iPod Shuffle 3G, iPod Shuffle 4G, iPod Touch, iPod Touch 2G, iPod Touch 3G, iPod Touch 4G, iPod Touch 5G

Archos: 50 Oxygen, 50 Platinum, 50c Oxygen, 80 Helium 4G

Asus: EEE Pad Transformer, EEE Pad Transformer Prime, Memo Pad 10, MEMO Pad 8, PadFone E, PadFone Mini, PadFone X, Transformer Book Duet, VivoTab Note 8, ZenFone 4, ZenFone 5, ZenFone 6

BenQ-Siemens: C81, CF61, CL71, E61, EF51, EF61, EF81, EF91, EL71, P51, S68, S81, S88

BlackBerry: 7100t, 7100v, 7100x, 7130v, 7230, 7290, 7730, 8100 Pearl, 8110 Pearl, 8120 Pearl, 8130 Pearl, 8220 Pearl, 8300 Curve, 8310 Curve, 8320 Curve, 8520 Curve, 8700f, 8700g, 8707v, 8800 Pearl, 8820, 8900 Curve, 9320 Curve, 9720, Bold, Bold 9700, Bold 9780, Bold 9790, Bold 9900, Curve 3G 9300, Curve 9360, Curve 9380, Pearl 3G, Q10, Q5, Storm, Storm2, Torch 9800, Torch 9810, Torch 9860, Z10, Z3, Z30

BLU: Neo 4

Blue Chip: VX1

BQ: Aquaris 5 HD, Aquaris 5.7, Aquaris E4, Aquaris E4.5, Aquaris E5, Aquaris E6, Curie 2, Curie 2 Quad Core, Edison 2, Edison 2 Quad Core

Celkon: A220, A225, A27

Dell: Axim 51, Streak, Streak 7, Venue, Venue 8 Pro, Venue Pro

Doro: PhoneEasy 332, PhoneEasy 341, PhoneEasy 410

E-TEN: G500, M600

EE: Eagle, Kestrel

Energy: Energy Phone Pro, Phone Neo, Phone Pro Qi

Gionee: GPad G2

GoClever: Terra 70 L

Google: Android One, G1 Android, Ion, Nexus 5, Nexus 9, Nexus One, Nexus S

Hewlett Packard: 910c, iPAQ 514, iPAQ Data Messenger, iPAQ Voice Messenger, iPAQ 610c

Hisense: U980

HP: 8 1401, hw6500, hw6900, hx2100, hx2700, hx4700, rw6815, rx5915, Slate 7, Slate6 VoiceTab, Slate7 VoiceTab

HTC: 7 Pro, 8S, 8X, Advantage, Butterfly, ChaCha, Desire, Desire 200, Desire 210, Desire 300, Desire 310, Desire 500, Desire 501, Desire 516, Desire 601, Desire 610, Desire 616, Desire 700 Dual SIM, Desire 709d, Desire 816, Desire C, Desire HD, Desire S, Desire VC, Desire X, Desire Z, Dream, EVO 3D, Evo 4G LTE, Explorer, First, Google Nexus One, Gratia, HD mini, HD2, HD7, HD7S, Hero, Incredible S, Inspire, Legend, M8 Ace, Magic, Mozart, MTeoR, One 2014, One Dual SIM, One E8, One M7, One M8, One M8 Ace, One M8 Dual SIM, One Max, One Mini, One Mini 2, One S, One SV, One V, One X, One X Plus, One XL, P3300, P3350, P3400, P3470, P3600, P4350, P6300, P6500, Radar, Rezound, Rhyme, S310, S620, S710, S730, S740, Salsa, Sensation, Sensation XE, Sensation XL, Shift, Smart, Snap, Tattoo, Thunderbolt, TITAN, Touch 3G, Touch Cruise, Touch Cruise 09, Touch Diamond, Touch Diamond2, Touch Dual, Touch HD, Touch phone, Touch phone, Touch Pro, Touch Pro2, Touch Viva, Touch2, Trophy, TyTN, TyTN II, Ville, Wildfire, Wildfire S

Huawei: Ascend D Quad, Ascend D Quad XL, Ascend D1, Ascend G300, Ascend G330, Ascend G510, Ascend G526, Ascend G6, Ascend G600, Ascend G730, Ascend Mate, Ascend Mate 2, Ascend P1, Ascend P6, Ascend P7, Ascend P7 Mini, Ascend W1, Ascend Y100, Ascend Y210D, Ascend Y530, Blaze, G7002, G7010, Honor, Honor 3, Honor 6, MediaPad M1, U7510, U8800 Ideos X5, Vision, Ascend Y300, Y600

Hummer: HT1

i-mate: JAM, JAMin, JASJAM, JASJAR, K-JAM, PDA2, PDA2K, Smartflip, SP JAS, SP3, SP3i, SP5, SP5m, SPL

Ice-Phone: Forever

iNQ: Cloud Touch

Intex: Aqua i7, Aqua Superb

JCB: Pro Talk TP851, Sitemaster TP802, TOUGHPHONE, Tradesman TP121

Karbons: A30, A9 Plus, K450, S5 Titanium, Titanium Hexa, Titanium Octane

Kazam: Thunder2 4.5L, Thunder2 5.0, Tornado2 5.0, Trooper2 5.0

Konka: Expose 960, Expose 970

Land Rover: S1

Lava: Iris 351, Iris 454, Iris 502

Lenovo: A526, Golden Warrior A8, IdeaTab A2107, K900, S660, S850, S860, ThinkPad 8, Yoga Tablet 10

Levis: Levis Phone

LG: 5300i, 5400, 7050, 7100, A 225, A133, A140, Arena, B2050, BL20 Chocolate, BL40 Chocolate, C1100, C1200, C2200, C3300, C3310, C3320, Cookie Fresh GS290, Cookie Gig KM570, Cookie Lite T300, Cookie Plus GS500, Cookie Style, Escape, F2250, F2400, F7250T, G Flex, G Pad 10.1, G Pad 7.0, G Pad 8.0, G Pad 8.3, G Pro 2, G2, G2 Mini, G3, G3 Mini, GB102, GB220, GC900 Viewty Smart, GD510 Pop, GD880 Mini, GD900 Crystal, GD910, GM205, GM310, GM730, GM750, GS101, GT350, GT400 Viewty Smile, GT500 Puccini, GT505, GT540 Optimus, GU230, GW300, GW520, GW550, GW620, GW910, InTouch Max, Intuition, Jil Sander, KB770, KC560, KC780 Reina, KC910 Renoir, KE800 Chocolate Platinum, KE820, Prada, KE970 Shine, KF300, KF310, KF350, KF510, KF600 Venus, KF700 Virgo, KF750 Secret, KF757 Secret, Kf900 Prada II, KG130, KG220, KG225 Butterfly, KG275 Jumong, KG290, KG320, KG800 Chocolate, KG810, KG920, KP100, KP130, KP170, KP235, KP500 Cookie, KP501 Cookie, KS20, KS360, KS365, KS500, KT520, KT770, KU990 Viewty, KU990i, L1100, L343i, L35, L40, L70, L80 Dual, L90, L90 Dual, Optimus 2X, Optimus 3D, Optimus 3D Max, Optimus 4X HD, Optimus 7, Optimus 7Q, Optimus Black, Optimus Chat C550, Optimus Chic, Optimus F3Q, Optimus F6, Optimus G Pro, Optimus Hub, Optimus L7, Optimus L7 II, Optimus L9, Optimus Me, Optimus Net, Optimus One, Optimus Pro, Optimus True HD, P7200, Prada 3.0, Rumor Reflex, S5200, Spectrum VS920, Spirit 4G, Swift, T310 Wink Style, Town C300, Town GT350, U300, U400, U8110, U8120, U8130, U8138, U8150, U8180, U8210, U8290, U8330, U8360, U8380, U880, U890, Viewty GT, Viewty Lite, Viewty Snap GM360, Wink 3G, KP202

Lobster: 485, 544, 575, 700TV, VM621i

Maxtouch: 7 Inch Android Tablet

MDA: Basic

Meizu: MX3

Micromax: A116 Canvas HD, Canvas Elanza 2, Canvas Turbo

Microsoft: Surface 2, Surface Pro 2

Mio: A701, Explora K75

Motorola: A1000, A3100, A780, A835, A910, A925, Atrix, Atrix HD, Aura, Backflip, C115, C139, C155, C200, C257, C261, C300, C336, C350, C385, C390, C450, C550, C650, C975, C980, DEFY, DEFY Mini, DEFY Plus, DEFY Plus JCB Edition, DEXT, Droid Razr HD, Droid Razr Maxx HD, Droid Ultra, DVX, E1000, E1070, E365, E398, E550, E770v, EM28, EM30, EM325, EM330, EM35, ES400, FIRE, FIRE XT, Flipout, Gleam, Gleam Plus, KRZR K1, KRZR K3, L2, L6, Milestone, Milestone 2, Moto E 1st Gen, Moto G 1st Gen, Moto G 2nd Gen, Moto G 4G LTE, Moto G Forte, Moto X 2nd Gen, MOTO Z10, F3, MOTOJEWEL, MOTOLUXE, MotoSmart, MPx, MPx200, MPx220, PEBL U6, PEBL2 U9, Photon 4G, Photon Q 4G, PRO, PRO PLUS, Q, Q11, Q9, Quench, RAZR, RAZR HD, RAZR maxx, RAZR V3, RAZR V3xx, RAZR2 V8, RAZR2 V9, RIZR, RIZR Z8, ROKR E1, ROKR E8, ROKR Z6, SLVR 7, T191, T192, T280, T720i, V1050, V150, V180, V220, V230, V235, V300, V360,

V3i, V3x, V50, V500, V525, V545, V547, V550, V60, V600, V620, V635, V66, V70, V80, V975, V980, VE538, VE66, VE75, W160, W161, W181, W220, W230, W231, W233, W270, W370, W375, W377, W388, W396, Wilder, XOOM, XOOM 2, XOOM 2 Media Edition, XT316, XT720, Z6w, ZN200, Zn300, ZN5, W156

NEC: 343i, 411i, e122, e228, e313, e338, e540, e606, e616, e808, e808Y

Newgen: C800

Nintendo: DS, DS Lite

Nodis: ND 503

Nokia: 100, 101, 106, 110, 1100, 1101, 1110, 1112, 112, 1200, 1202, 1208, 1209, 1600, 1616, 1650, 1661, 1680 Classic, 1800, 208, 2100, 220, 2220, 2300, 2310, 2323 Classic, 2330 Classic, 2600, 2600 Classic, 2610, 2626, 2630, 2650, 2652, 2680 Slide, 2690, 2700 Classic, 2710 Navigation Edition, 2720 Fold, 2730 Classic, 2760, 3100, 3109 Classic, 3110 Classic, 3110 Evolve, 3120, 3120 Classic, 3200, 3210, 3220, 3230, 3250, 3300, 3310, 3330, 3410, 3500 Classic, 3510, 3510i, 3600 Slide, 3610 Fold, 3650, 3660, 3710 Fold, 3720 Classic, 500, 5000, 5030, 5070, 5100, 5110, 5130 XpressMusic, 5140, 5140i, 5200, 5210, 5220, 5228, 5230, 5235, 5250, 5300, 5310, 5320, 5330 Mobile TV Edition, 5330 XpressMusic, 5500, 5530 XpressMusic, 5610, 5630 Xpress Music, 5700, 5730 XpressMusic, 5800 Xpress Music, 600, 6020, 6021, 6030, 6060, 6070, 6080, 6085, 6086, 6100, 6101, 6103, 6110, 6110 Navigator, 6111, 6120 Classic, 6124, 6125, 6131, 6136, 6150, 6151, 6170, 6210, 6210 Navigator, 6212 Classic, 6216 Classic, 6220, 6220 Classic, 6230, 6230i, 6233, 6234, 6260, 6260 Slide, 6267, 6270, 6280, 6288, 6290, 6300, 6300i, 6301, 6303 Classic, 6303i Classic, 6310i, 6500 Classic, 6500 Slide, 6510, 6555, 6600, 6600 Fold, 6600 Slide, 6600i Slide, 6610, 6610i, 6630, 6650, 6650 Flip, 6670, 6680, 6681, 6700 Classic, 6700 Slide, 6710 Navigator, 6720 Classic, 6730 Classic, 6760 Slide, 6800, 6810, 6820, 6822, 700, 701, 7020, 7070 Prism, 7100 Supernova, 7110, 7200, 7210, 7210 Supernova, 7230 Slide, 7250, 7250i, 7260, 7270, 7280, 7310 Supernova, 7360, 7370, 7373, 7380, 7390, 7500 Prism, 7510 Supernova, 7600, 7610, 7610 Supernova, 7650, 7700, 7710, 7900 Prism, 808 PureView, 8210, 8310, 8600 Luna, 8800, 8800 Arte, 8800 Diamond Arte, 8800 Sirocco, 8850, 8890, 8910, 8910i, 9210i, 9300, 9300i, 9500, Asha 201, Asha 202, Asha 203, Asha 210, Asha 230, Asha 300, Asha 302, Asha 303, Asha 306, Asha 502, C1 00, C1 01, C1 02, C2, C2 01, C2 02, C2 03, C2 05, C3, C3 01 Touch and Type, C3 01.5, C5, C5 03, C6, C6 01, C7, E5, E50, E51, E51 (No Camera), E52, E55, E6, E60, E61, E61i, E63, E65, E66, E7, E70, E71, E72, E75, E90, N-Gage, N-Gage QD, N70, N71, N72, N73, N76, N78, N79, N8, N80, N81, N82, N85, N86 8MP, N9, N90, N900, N91, N92, N93, N93i, N95, N95 8GB, N96, N97, N97 mini, Oro, X, X Plus, X1 00, X1 01, X2, X2 01, X3, X3 02 Touch And Type, X3-02, X5 01, X6, X7, XL

O2: Cocoon, Ice, X 2, X 3, X1, X1b, X1i, X4, XDA, XDA Argon, XDA Atmos, XDA Comet, XDA Diamond, XDA Exec, XDA Graphite, XDA Guide, XDA Ignito, XDA II, XDA Ili, XDA IIs, XDA IQ, XDA Mini S, XDA Orbit, XDA Orbit 2, XDA Serra, XDA SP, XDA Star, XDA Stellar, XDA Terra, XDA Trion, XDA Zest, XDA Zinc, XM, XDA Stealth

OnePlus: One

Oppo: Find 5, Find 7, Find 7a, R3

Orange: Amsterdam, Atlanta, Barcelona, Berlin, Boston, SPV C550, Dallas, Gova, Lisbon, M1000, M1500, M2000, M3000, SPV M3100, M500, SPV M5000, M700, Miami, Monte Carlo, New York, Rio, Rio II, Rome, San Diego, San Francisco, San Francisco II, Santa Clara, SPV, SPV C100, SPV C500, SPV C600, SPV C700, SPV E100, SPV E200, SPV E610, SPV E650, SPV M600, Stockholm, Sydney, Tokyo, Treo 600, Vegas

Palm: Centro, Pixi, Pixi Plus, Pre, Pre 2, Pre 3, Pre Plus, Treo 500v, Treo 650, Treo 680, Treo 700, Treo 750, Treo Pro

Panasonic: Eluga, Eluga Power, G50, G60, GD55, GD67, GD87, VS3, VS6, X300, X400, X500, X60, X70, X700

Pantech: Vega Iron, Vega No 6

Philips: 355, 760

Porsche: P9521, P9522

Prestigio: MultiPhone 5300 DUO, MultiPhone 5450 DUO, MultiPhone 5500 DUO

Qtek: 2020i, 8010, 8100, 8300, 8310, 8500, 8600, 9000, 9090, 9100, 9600, S100, S110, S200

Sagem: MC920, my-300X, my150X, my200C, my220x, my226x, my234x, my300C, my301X, MY3020, my302X, MY3078, my400X, my401C, my401x, my401Z, my405X, my411C, my411CV, my411V, my411X, my419x, my421Z, my501c, my501x, my511X, my519x, my521x, my600v, my600X, my700X, my721X, my730c, my750x, my800x, my850c, my901C, myC-1, myC-3, myC-3b, myC-4, myC-2, myC2-2, myc3-2, myC4-2, myC5-2, myC5-3, myC-5w, myS-7, myV-55, myV-56, myV-65, myV-75, myV-76, myX-8, myX-1, myX1-2, myX-2, myX2-2, myX-3, myX3-2, myX-4, myX-5, myX5-2, myX-6, myX6-2, myX-7, MyZ-55

Samsung: A300, A800, Ativ S, ATIV SE, B210, B2100 Solid Extreme, B2700, B300, B3210 Corby TXT, B3310, B3410, B510, B5310 Corby PRO, B5722, B7502, B7620 Giorgio Armani , B7722, Beam I8520, Beat DISC, Blade, Blue Earth, C100, C110, C120, C130, C140, C170, C3050, C3060, C3110, C3212, C3300 Libre, C3350 Solid X Cover, C3510, C3630, C5212, C5510, C6112, C6620, C6625, Champ Deluxe Duos, Chat 222, Chat 322, Chat 335, Chat B3410W, Core LTE, D410, D500, D520, D600, D780 DuoS, D800, D820, D830, D840, D880 DuoS, D900, D900i, D980 DuoS, Diva Diamond, E1050, E1080, E1100, E1107 Solar Guru, E1120, E1150i, E1170, E1360B, E2100, E2120, E2120B, E2121, E2121B, E215, E2210B, E2330, E2370, E250, E250i, E2600, E300, E310, E330, E350, E370, E390, E400, E420 Lily, E530, E570, E590, E600, E620, E630, E700, E710, E720, E730, E740, E760, E770, E780, E800, E810, E820, E840, E870, E880, E900, Exhilarate i577, F110 MiCoach, F200, F210, F250, F300, F400, F480 Player Style, F480 Tocco, F490, F700, Flutter, G400, G600, G800, G810, G9098, Galaxy , Galaxy 3 I5800, Galaxy 550, Galaxy 551, Galaxy Ace 2, Galaxy Ace 3 3G, Galaxy Ace 3 4G, Galaxy Ace 4, Galaxy Ace Duos S6802, Galaxy Ace Plus, Galaxy Ace, Galaxy Ace Style, Galaxy Apollo i5801, Galaxy Axiom, Galaxy Beam, Galaxy Beam 2, Galaxy Chat B5330, Galaxy Core, Galaxy Core Advance, Galaxy Core II, Galaxy Europa I5500, Galaxy Express 2, Galaxy Extreme, Galaxy F, Galaxy Fame, Galaxy Fit S5670, Galaxy Gio S5660, Galaxy Grand, Galaxy Grand 2, Galaxy Grand Z, Galaxy K Zoom, Galaxy Lite, Galaxy M Pro, Galaxy Mega 2, Galaxy Mega 5.8, Galaxy Mega 6.3, Galaxy Mini 2, Galaxy Mini S5570, Galaxy Next Turbo, Galaxy Nexus, Galaxy Note, Galaxy Note 2, Galaxy Note 3, Galaxy Note 3 Neo, Galaxy Note 4, Galaxy Note Pro, Galaxy Pocket, Galaxy Portal, Galaxy Pro, Galaxy R, Galaxy Round, Galaxy S Advance, Galaxy S Duos, Galaxy S I9000, Galaxy S Plus I9001, Galaxy S2, Galaxy S2 Skyrocket, Galaxy S3, Galaxy S3 LTE, Galaxy S3 Mini, Galaxy S4, Galaxy S4 Active, Galaxy S4 Mini, Galaxy S4 Zoom, Galaxy S5, Galaxy S5 Active, Galaxy S5 Mini, Galaxy S5 Neo, Galaxy S5 Prime, Galaxy S5 Sport, Galaxy Star 2, Galaxy Stellar, Galaxy Tab 3 Lite , Galaxy Tab 4 10.1, Galaxy Tab 4 7.0, Galaxy Tab 4 8.0, Galaxy Tab Pro 10.1, Galaxy Tab Pro 12.2, Galaxy Tab Pro 8.4, Galaxy Tab S 10.5, Galaxy Tab S 8.4, Galaxy Teos, Galaxy Trend Plus, Galaxy Victory 4G, Galaxy W, Galaxy Xcover, Galaxy Xcover 2, Galaxy Y, Galaxy Y Pro, Galaxy Young, Galaxy Young 2, Genio PRO, Genio Qwerty, Genio Slide, Genio Touch, Glamour S5150, Glamour S7070, Google Nexus S, Grand Neo, H1, i200, i300, i300x, i320, I550, i5500 Corby, i5500 Galaxy 5, i560, i5700 Galaxy Portal, i600, i620, i640, i7110 Pilot, i7410, i7500, i780, i8510 INNOV8, I8520 Halo, i900 Omnia, I9003 Galaxy SL, I9010 Galaxy S Giorgio Armani, J400, J600i, J700, Jet S8000, Jet Ultra Edition, Knox, L170, L310, L320, L760, L770, Lucido, M110 Solid, M150, M200, M2310, M2510, M300, M310, M3200 Beat S, M3310, M3510 Beat B, Lindy M5650, M7500 Emporio Armani, M7600 Beat DJ, M8800 Pixon, Mega 6.3, Miss Player, Monte Bar C3200, Monte S5620, Monte Slider E2550, Naos, Omnia 7, Omnia HD i8910, Omnia II I8000, Omnia Lite, Omnia M , Omnia PRO 4 B7350, Omnia Pro B7320, Omnia Pro B7330, Omnia Pro B7610, Omnia W, P180, P200, P260, P300, P310, P400, P510, P520 Armani, P730, P960, Pixon12, Player 5, Player Light, Player Mini, Player One, Player Star, Player Star 2, Preston, Qbowl, Rex 60, Rex 70, Rex 80, Rex 90, Rocky E1130, S2 Plus,

S300, S3100, S3110, S3370, S3500, S3600, S3650 Corby, S400i, S401i, S500i, S5050, S5150 Diva Folder, S5200 Slide, S5230 Star, S5260 Star II, S5530, S5560, S5600, S5750, S6700, S7070 Diva, S7230, S7310 Ultra S, S7330, S7350 Ultra Slide, S8300 Ultra Touch, S9110, S9402 Ego, Serenata, Serene, SGH C300, U300, X700, SGH Z500, SGH-S100, Shark 2 S5550, Shark 3 S3550, Shark S5350, Solid Immerse, Steel Phone, T100, Teos, Tobi, Tocco Icon, Tocco Lite, Tocco Lite 2, Tocco Quick Tap, Tocco Ultra Edition, U100, U600, U700, U800 b, U900, V200, Wave 2 Pro S5330, Wave 2 S5250, Wave 3, Wave 525, Wave 533, Wave 575, Wave 723, Wave II S8530, Wave M, Wave S8500, Wave Y, X100, X450, X460, X530, X600, X640, X660, X680, X820, X830, Z, Z105, Z107, Z130, Z140, Z300, Z320i, Z400, Z510, Z540, Z560, Z650i, Z720, ZM60, ZV40

Sanyo: S750, S750i

Sendo: M550, M570, P220, P600, S220, S300, S600, S600, Sendo X

Sharp: 703, 770SH, 802, 880SH, 902, 903, Aquos Xx 302Sh, GX1, GX10, GX10i, GX15, GX17, GX20, GX25, GX29, GX30, GX30i, TM100

Siemens: A50, A52, A55, A57, A60, A62, A65, A75, AX75, C25, C35, C45, C55, C60, C62, C65, C75, CF62, CF75, CFX65, CL50, CL55, CL75, CV65, CX65, CX70, CX70 Emoty, CX75, M35, M50, M55, M65, M75, MC60, MCT 62, ME45, MT50, S25, S35, S45, S55, S65, S75, SF65, SK65, SL45, SL55, SL65, SL75, SP65, ST55, ST60, SX1

Smartisan: T1

Sonim: XP1, XP2 Spirit, XP3

Sony: acro S, PSP, Tablet S, Xperia A2, Xperia C, Xperia C3, Xperia E, Xperia E1, Xperia go, Xperia i1, Xperia ion, Xperia J, Xperia L, Xperia M, Xperia M Dual, Xperia M2, Xperia Miro, Xperia P, Xperia S, Xperia SL, Xperia Sola, Xperia SP, Xperia T, Xperia T2 Ultra, Xperia T2 Ultra Dual, Xperia T3, Xperia Tipo, Xperia tipo dual, Xperia TX, Xperia U, Xperia V, Xperia XL, Xperia Z, Xperia Z Ultra, Xperia Z1, Xperia Z1 Compact, Xperia Z1f, Xperia Z1S, Xperia Z2, Xperia Z2 Compact, Xperia ZL, Xperia ZL2, Xperia ZR, Z2a Compact

Sony Ericsson: Aino, Aspen, C510, C702i, C901, C902, C903, C905, Cedar, D750i, Elm, F305, F500i, G502, G700, G705, G900, Hannah, Hazel, J100i, J110i, J120i, J132, J210i, J220i, J230i, J300, J5, J7, Jalou, K200i, K220i, K300i, K310i, K320i, K330, K500i, K508, K510i, K530i, K550i, K600i, K608i, K610i, K630i, K660i, K700i, K750i, K770i, K790i, K800i, K810i, K850i, M600i, Mix Walkman, Naite, P1i, P800, P900, P910i, P990i, R300, R306, S302, S312, S700i, Satio, S500i, Z320i, Spiro, T100, T18, T20, T200, T230, T250i, T270i, T28, T280i, T290i, T300, T303, T310, T39, T600, T610, T630, T65, T650i, T68, T68i, T700, T707, T715, txt, Txt Pro, V600i, V630, V640i, V800, Vivaz, Vivaz Pro, W200i, W205, W300i, W302, W350i, W380i, W395, W508, W550i, W580i, W595, W610i, W660i, W700i, W705, W710i, W715, W760i, W8, W800i, W810i, W850i, W880i, W890i, W900i, W902, W910i, W950i, W960i, W980i, W995, X10, Xperia Active, XPERIA Arc, Xperia arc S, XPERIA Kyno, XPERIA Mini, XPERIA Mini Pro, XPERIA Neo, Xperia neo V, Xperia Play, XPERIA Pro, Xperia Pureness, Xperia Ray, Xperia X1, XPERIA X10 Mini, XPERIA X10 Mini Pro, Xperia X2, XPERIA X8, Yari, Yendo, Z1010, Z200, Z250i, Z300i, Z310i, Z500, Z520i, Z530i, Z550i, Z555i, Z558i, Z600, Z610i, Z7, Z710i, Z750i, Z770i, Z780i, Z800i, Zyllo

Swipe: Fablet F2, Fablet F3, MTV Volt 1000

T Mobile: Ameo, Dash 3G, E100 Flip, G1, G2 Touch, MDA Compact, MDA Compact II, MDA Compact III, MDA Compact IV, MDA Compact V, MDA III, MDA Mail, MDA Pro, MDA Touch, MDA Vario, MDA Vario III, MDA Vario IV, MDA Vario V, myTouch 3G, myTouch 3G Slide, Pulse, Pulse Mini, SDA, SDA II, SDA Music, Sidekick II, Sidekick III, Sidekick Slide, Touch Plus, Vairy Text, Vairy Touch, Vairy Touch II, Vibe, Zest E110, ZTE X760, MDA Vario II, myTouch 3G, Accord, Affinity, Beat, Energy, Groove, Rapport, Unity, Vivacity

Tesco: Hudl 2

Toshiba: Encore 2 10, Encore 2 8, Excite Go, G 810, G450, G710, G910, K01, TG01, TG02, TS10, TS803

Videocon: A 27

Virgin: VM 720, VM202, VM665, VM800, VM820

VK: 2000, 2020, 207i, 530, 570

Vodafone: 226, 231, 340, 345, 351, 360 H1, 360 M1, 455, V526, 527, 533, 540, 543, 547, 550, 553, 625, 725, 845, 945, M1, Smart 4 Mini, Smart 4G, Smart 858, Smart Tab II 10, Touch 541, v1605, v1615, v1640, VF810, VF830, VPA Compact, VS1, VS2, VS3, Simply VS4

Wiko: Barry, Bloom, Cink Five, Cink Peax 2, Darkmoon, Darknight, Darkside, Fizz, Highway, Mazing, Rainbow, Stairway, Wax

Wolder: mismart XLIM

Woxter: Zielo S11

Xelibri: 2, 3, 4, 5, 6, 7, 4

Xiaomi: Mi 3, Mi Pad 7.9, Redmi, Redmi Note

Xolo: A500, A500s, Play, Q1000, Q1000s, Q1100, Q2000, Q3000, Q700, Q800, X1000

Yarvik: Luna 7 101

Zen: Ultrafone 502

ZTE: Blade 2, Grand Memo II LTE, Grand S, Grand X, KPN Smart 200, Libra, Nubia X6, Open, Racer, Skate, Tania, Tureis, X760